
GLOSS Series

GLOSS-15-60° GLOSS-15-60°-d...

- 60° gloss measurement (for semi-glossy surfaces)
- Working distance 15 mm ± 10%
- Insensitive to outside light due to clocked white light
- Internal reference (thus optimum light power adjustment to the respective object surface)
- Teaching of up to 7 gloss degrees
- Parameterisable under Windows®
- RS232 interface (USB or Ethernet converter is available)
- Scratch-resistance glass cover of optics
- Compact and sturdy aluminum housing
- Transmitter power adjustable or controllable (STAT or DYN)
- Averaging can be activated (over up to approx. 32000 values)
- Digital input IN0 for teaching or optionally for scope function
- Digital input IN1 for the defined output of the analog signal
- 3 switching outputs (npn-/pnp-able, 100 mA, short circuit proof)
- 1 analog output (0...+10V or 4...20mA, selectable) parameterizable under Windows® proportional to gloss degree
- Calibration function (black glass) by means of calibration unit (optional)
- Offline unit as well as blast-air top available (optional)




For technical support, sales & distribution within the USA & Canada

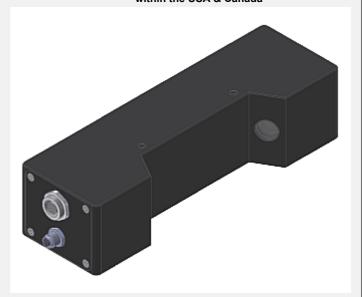



Design

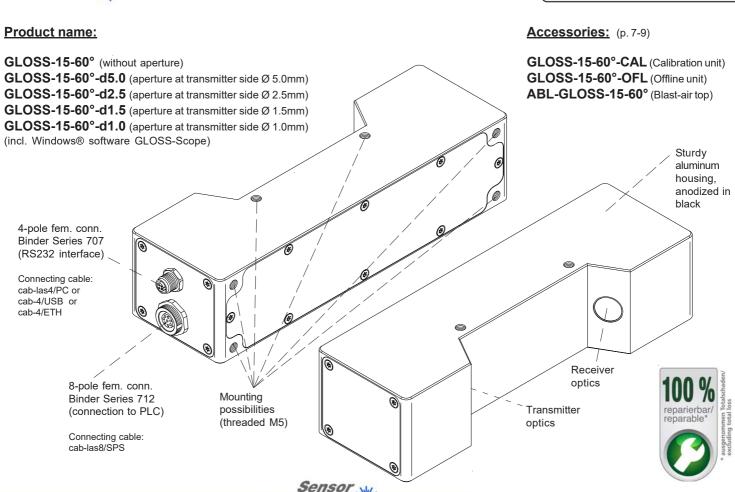

Instruments







Technical Data

Туре	GLOSS-15-60° / GLOSS-15-60°-d
Voltage supply	+24VDC (± 10%), protected against polarity reversal, overload protected
Current consumption	typ. 100 mA
Max. switching current	100 mA, short-circuit proof
Interface	RS232, parameterisable under Windows®
Digital inputs (2x)	digital input IN0: for teaching or optionally for scope function digital input IN1: for the defined output of the analog signal
Digital outputs (3x)	OUT0 OUT2: Qinv or Q, (adjustable via PC): Qinv: npn bright-switching (npn n.c.) / pnp dark-switching (pnp n.o.) Q: pnp bright-switching (pnp n.c.) / npn dark-switching (npn n.o.)
Analog output (1x)	voltage output 0V+10V or current output 4mA20mA (can be switched under Windows®)
Analog band width	max. 90 kHz (-3 dB)
Tolerance range for digital outputs	parameterisable under Windows®
Switching state indication	2 yellow LED visualize the physical state of the outputs OUT0 and OUT1
Scan frequency	LED mode AC (depends on parameterization): Frequency [Hz] Digital outputs Analog output Max. 22 100 Off Off Max. 61 750 Off Off Max. 20 300 On Off On Max. 52 800 On Off Max. 20 300 Off On Max. 49 700 Off On Measurements were made with the smallest gain at the receiver (AMP1). At the highest gain (AMP8), the frequency is reduced by a factor of 5.
Switching frequency	max. 60 kHz
Averaging	max. 32768 values, adjustable under Windows®
Transmitter (light source)	white light LED
Measurement range	60°: 01000 GU
Reproducibility	0100 GU: ± 0,2 GU 1001000 GU: ± 0,2 %
Working distance	typ. 15 mm ± 10 %
Size of light spot	GLOSS-15-60°: at a working distand of 15 mm: typ. 10 mm x 20 mm (elliptical) GLOSS-15-60°-d5.0: at a working distand of 15 mm: typ. 5 mm x 10 mm (elliptical) GLOSS-15-60°-d2.5: at a working distand of 15 mm: typ. 2.5 mm x 5 mm (elliptical) GLOSS-15-60°-d1.5: at a working distand of 15 mm: typp. 1.5 mm x 3 mm (elliptical) GLOSS-15-60°-d1.0: at a working distand of 15 mm: typ. 1 mm x 2 mm (elliptical)
Control mode for light source	AC operation (LED MODE-AC) or DC operation (LED MODE-DC), can be switched via PC software
Transmitter power	parameterisable under Windows (STATIC or DYNAMIC)
Optical filter	day light filter (KG2)
Pulse lengthening	0 100 ms (parameterisable under Windows®)
Ambient light	up to 5000 Lux
Housing dimensions	LxWxH approx. 160 mm x 50 mm x 40 mm
Housing material	aluminum, anodized in black
Enclosure rating	IP67
Connecting cables	to PLC: cab-las8/SPS or cab-las8/SPS-w and cab-las4/SPS to PC/RS232 interface: cab-las5/PC or cab-las5/PC-w to PC/USB interface: cab-4/USB or cab-4/USB-w to PC/Ethernet interface: cab-4/ETH
Type of connector	connection to PLC: 8-pole female connector Binder Series 712 connection to PC: 4-pole female connector Binder Series 707
Operating temperature range	-20°C +55°C
Storage temperature range	-20°C +85°C
EMC test acc. to	DIN EN 60947-5-2 (€











Dimensions

GLOSS-15-60° GLOSS-15-60°-d...

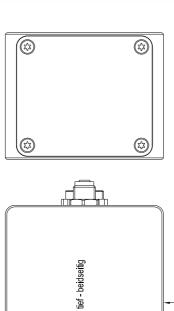

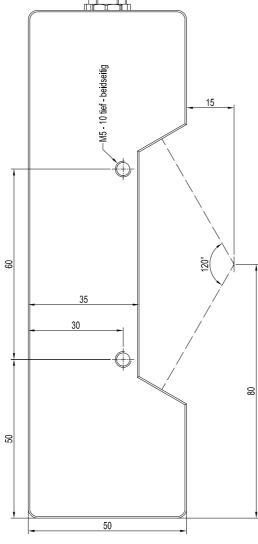

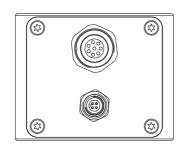

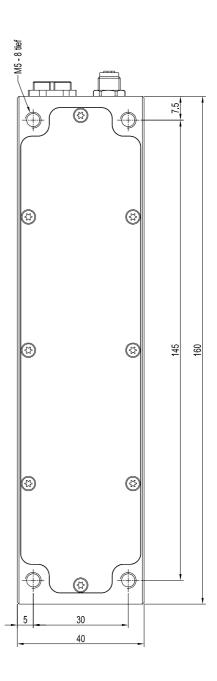







Connector Assignment

Connection to PLC:

8-pole fem. connector Binder Series 712

 Pin:
 Color:
 Assignment:

 1
 white
 GND (0V)

 2
 brown
 +24VDC (±10%)

 3
 green
 IN0 (digital 0: 0 ... 1V, digital 1: +Ub - 10%)

 4
 yellow
 IN1 (digital 0: 0 ... 1V, digital 1: +Ub - 10%)

5 grey OUT0 (digital 0: Type 0 ... 1V, digital 1: Type +Ub - 10%)
6 pink or black OUT1 (digital 0: Type 0 ... 1V, digital 1: Type +Ub - 10%)
7 blue OUT2 (digital 0: Type 0 ... 1V, digital 1: Type +Ub - 10%)

8 red ANALOG (0...+10V or 4 ... 20mA)

Connecting cable: cab-las8/SPS-(length) cab-las8/SPS-w-(length) (angle type, 90°) (standard length 2m)



4-pol. fem. connector Binder Series 707

Pin: Assignment: 1 +24VDC (+Ub_OUT)

1 +24VDC (+Ub, OUT) 2 GND (0V)

3 RxD 4 TxD

Connection via RS232 interface at the PC:

Connecting cable: cab-las4/PC-(length) cab-las4/PC-w-(length) (angle type 90°) (standard length 2m)

alternative:

Connection via USB interface at the PC:

USB converter (incl. driver software): cab-4/USB-(length) cab-4/USB-w-(length) (angle type 90°) (standard length 2m)

alternative:

Connection to local network via Ethernet bus:

Ethernet converter (incl. software "SensorFinder"):: cab-4/ETH-500 (incl. software "SensorFinder")


0

0





cab-4/ETH-500 (length 500mm, outer jacket: PUR)

4-pole M12 fem. connector (D-coded) for connection of an external CAT5 cable, e.g. cab-eth/M12D-RJ45-flx-(length) (available in length 2m, 5m, 10m, or 20m)




cab-las8/SPS-w-... (max. length 25m, outer jacket: PUR)

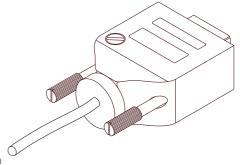



cab-las4/PC-... (max. length 10m, outer jacket: PUR) or cab-las4/PC-w-... (no picture) (max. length 5m, outer jacket: PUR)

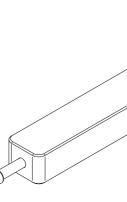









Measuring Angles

For the gloss detection sensors of GLOSS Series different standard measuring angles are available:

20°: For high-gloss surfaces.

A 20° gloss sensor is used if gloss grades >70GU are to be determined.

That is, if the gloss grade measured with a 60° gloss meter is >70GU, a 20° gloss sensor is used.

45°: TAPPI standard (paper industry) for glossy surfaces.

60°: For semi-gloss surfaces.

A 60° gloss sensor is used if gloss grades >10GU to <70GU are to be determined.

This variant is an "all-rounder". The 60° gloss sensor is therefore standard for most applications.

75°: TAPPI standard (paper industry) for matt surfaces.

85°: For matt surfaces.

An 85° gloss sensor is used when gloss grades <10GU are to be determined.

That is, if the gloss grade measured with a 60° gloss meter is <10GU, an 85° gloss sensor is used.

[GU = Gloss Unit]



Measuring Principle

Measuring principle of the gloss detection sensor GLOSS-...:

A white-light LED projects a white light spot onto the surface to be inspected. A part of the light that is directly reflected from the measuring object is directed onto a receiver by the receiver optics (the receiver optics is arranged at the same angle from the vertical as the transmitter optics). Furthermore, diffuse reflection is determined by means of an additional optics. Signal acquisition is performed with 12 bit.

The GLOSS sensor optionally can be "taught" up to 7 gloss levels or norm vectors.

The gloss level or the detected norm vector is provided at the digital outputs.

In addition the gloss level also is provided in analog form from 0 to 10V or from 4mA to 20mA.

A digital input allows external "teaching" of the sensor.

As an alternative the sensor also can be triggered with the same input.

An additional input allows the "freezing" of the analog output signal upon a positive input edge.

The GLOSS sensor allows highly flexible signal acquisition. The sensor, for example, can be operated in alternating-light mode (AC mode), which means the sensor is not influenced by external light, or in constant-light mode (DC mode), which provides outstanding high-speed sensor operation. An OFF function deactivates the sensor's integrated light source. With the stepless adjustment of the integrated light source, the selectable gain of the receiver signal, and an INTEGRAL function the sensor can be adjusted to almost any surface.

The sensor must be calibrated for gloss level detection. For this purpose a reference surface is required which by definition has a gloss level of 100GU (Gloss Units). Calibration then is performed with the PC software. The sensor also can be calibrated to foreign systems, which can be optionally activated in the PC software.

The GLOSS series sensors are factory calibrated. When establishing the connection, the date of the next calibration is displayed in the status window in the CONNECT tab. For continuously accurate measurement results, we recommend having the calibration renewed every 18 months and sending in the sensors for calibration.

Parameters and measurement values can be exchanged between PC and sensor either through RS232 or Ethernet (using an Ethernet converter). Through the interface all the parameters can be stored in the non-volatile EEPROM of the sensor.

The PC software facilitates the parameterisation, diagnostics, and adjustment of the sensor system (oscilloscope function). The software furthermore provides a data recorder function that automatically records data and stores them on the hard disk of the PC.

GLOSS sensors are temperature-compensated over a range of 0°C to 80°C.

Possible firmware updates can be easily performed through the RS232 interface, even with the sensor system in installed condition.

When parameterisation is finished, the color sensor continues to operate with the current parameters in STAND-ALONE mode without a PC.








Parameterization

Windows® user interface:

(The current software version is available for download on our website.)

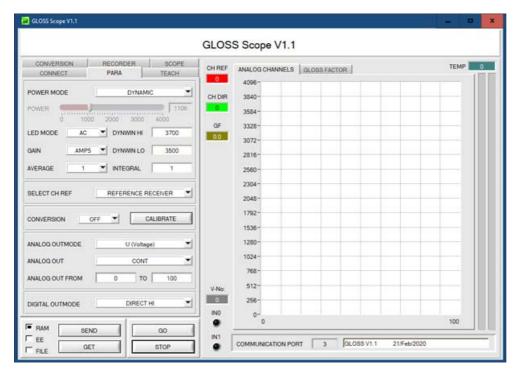

The gloss sensor is parameterized under Windows® with the GLOSS-Scope software. The Windows® user interface facilitates the teach-in process at the sensor and supports the operator in the task of adjustment and commissioning of the sensor.

The software provides various display elements and a graphic window for the visualisation of all the data that are important for parameterisation.

n the CONVERSION tab a certain conversion value can be assigned to the gloss factor GF signal.


The GLOSS-Scope software features a data recorder (RECORDER tab).

The SCOPE tab visualizes an oscilloscope.



Firmware Update

Firmware update by means of the software "FirmwareLoader":

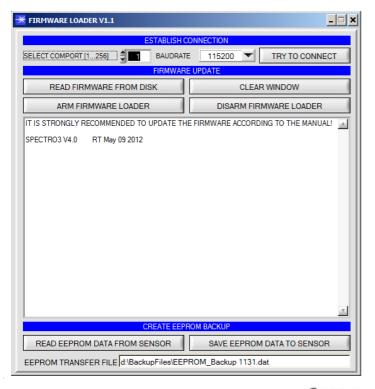

The software "Firmware Loader" allows the user to perform an automatic firmware update. The update will be carried out through the RS232 interface.


An initialisation file (xxx.ini) and a firmware file (xxx.elf.S) are required for performing a firmware update. These files can be obtained from your supplier. In some cases an additional firmware file for the program memory (xxx.elf.p.S) is also needed, and this file will be automatically provided together with the other two files.










Calibration Unit

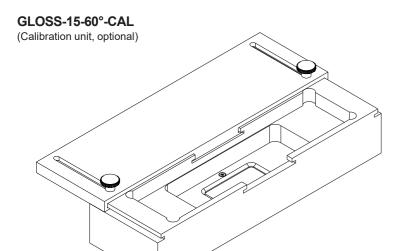



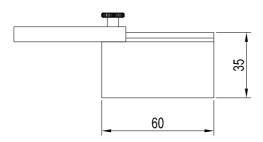

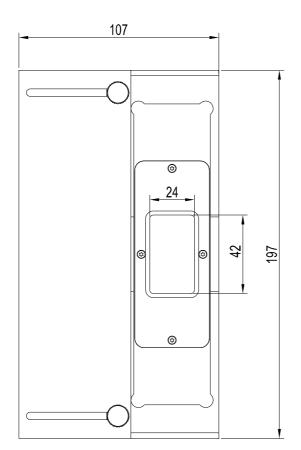









Offline Unit

GLOSS-15-60°-OFL

(Offline unit / spacer, optional)

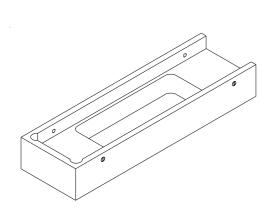



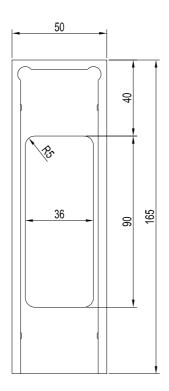







Blast-air Top

ABL-GLOSS-15-60°

(Blast-air top, optional)

